


# Crestron Touch Pad Button Guide

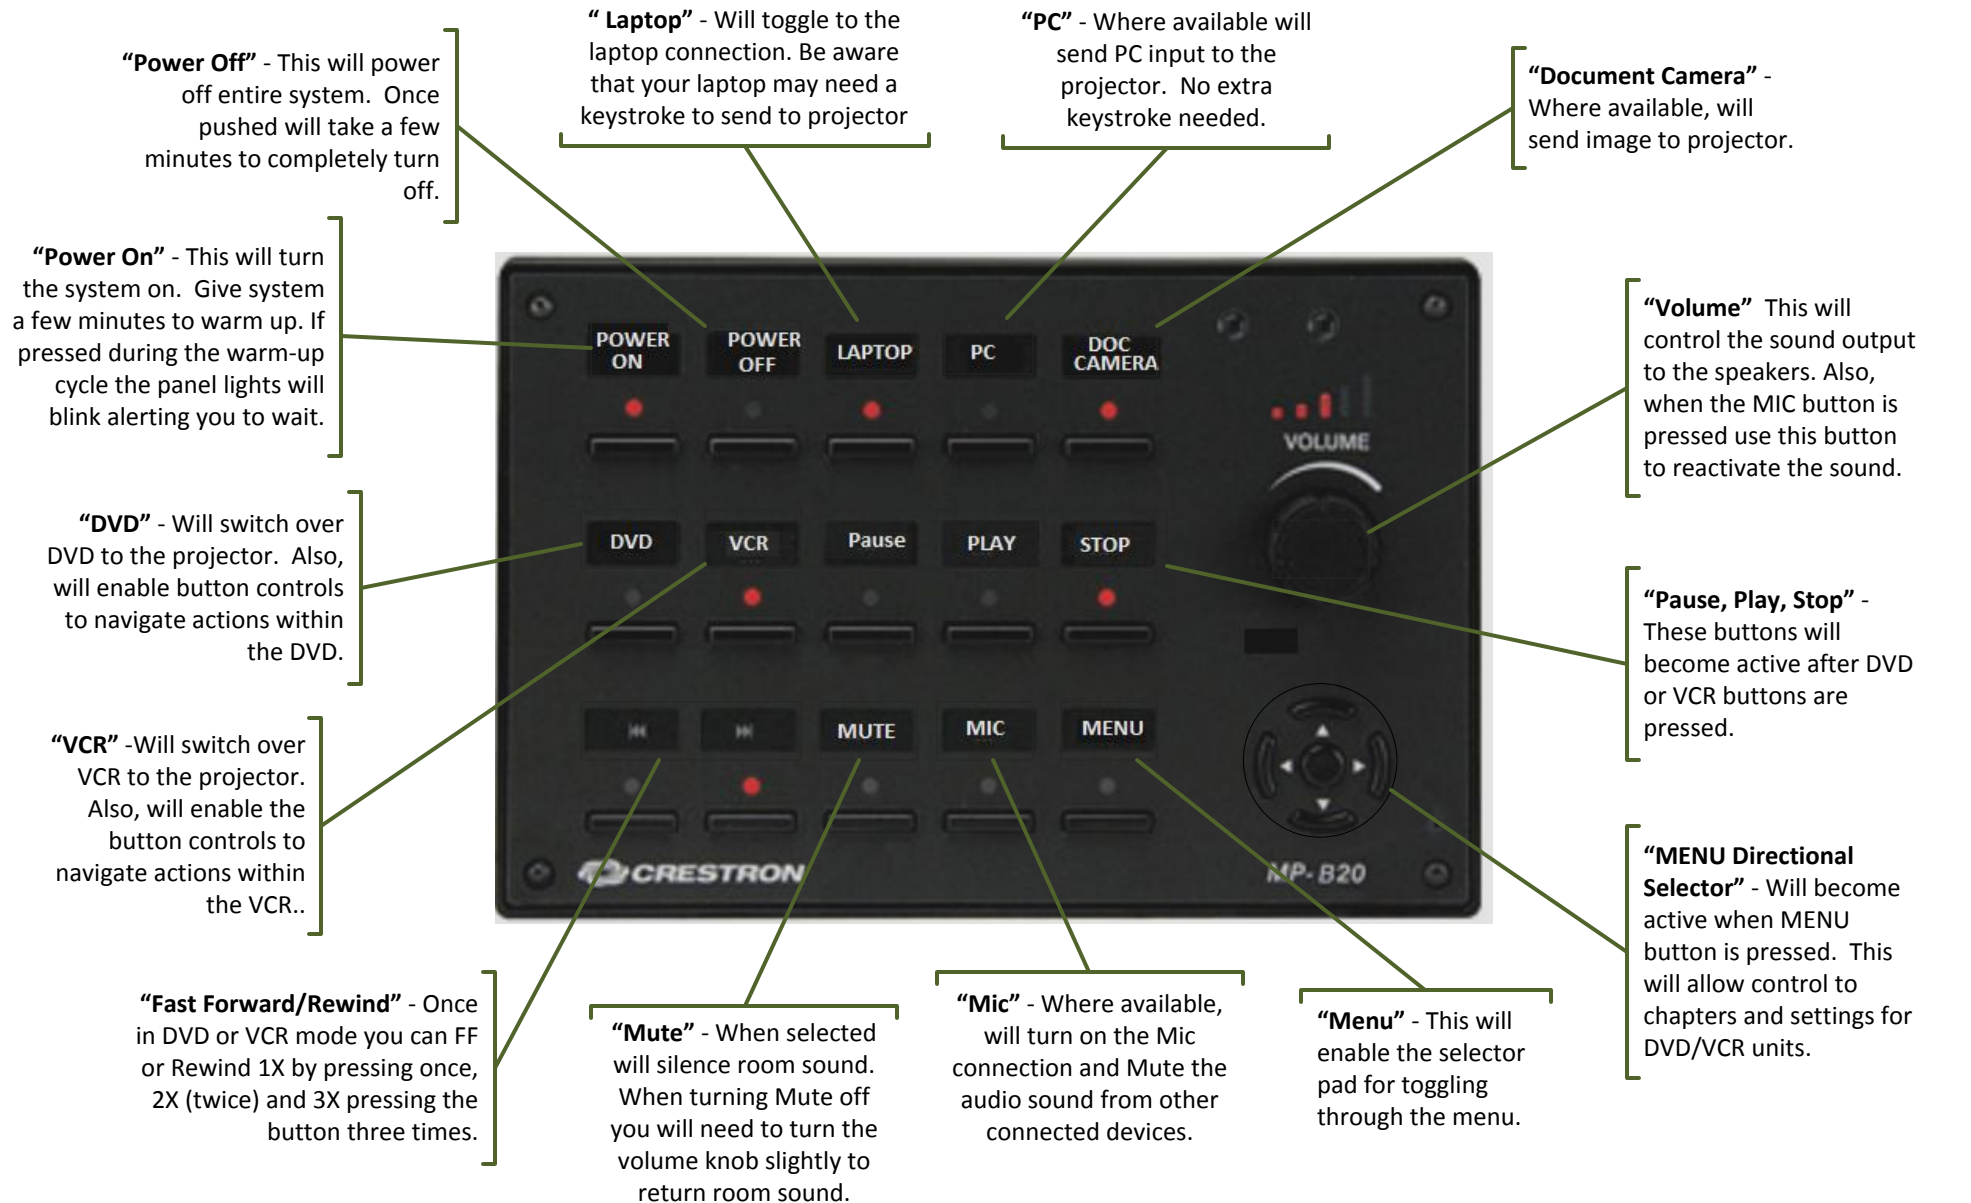

**\*\* If you are experiencing technical difficulties such as: Projector light not on, touch pad not switching devices/on please call or email your OC ITS help desk @ [OCHelpDesk@vcccd.edu](mailto:OCHelpDesk@vcccd.edu) or call x5898 for more assistance. Please do not try to troubleshoot the equipment yourself this may lead to further damage to the equipment.**