

Crestron Smart Classrooms @ Oxnard College

Getting Started

1. Power ON

- Press control panel “POWER ON” button
- **WAIT 2 MINUTES** while system and projector power up
- If **RED LIGHTS** flash, **WAIT** until the system is ready

When the red lights on all buttons flash, the system is currently in a start-up or shut-down process and it will not respond to other input selections.

2. Select Input

- Once the projector is ready, choose the input source desired
- If you switch to a different display, **WAIT** for loading to complete!
 - **FOR COMPUTER DISPLAY AND POWERPOINT:**
 1. VERIFY COMPUTER IS ON
 2. PRESS “PC” BUTTON ON CONTROL PANEL
 - **NOTE: AT THE MOMENT, THERE IS A QUIRK IN THE SYSTEM THAT REQUIRES YOU TO PRESS “LAPTOP” FIRST AND THEN PRESS “PC”**
 3. **WAIT** 30 SECONDS FOR DISPLAY INPUT TO SWITCH
 - **FOR LAPTOP**
 1. CONNECT LAPTOP WITH PROVIDED VGA, AUDIO, & NETWORK CABLES
 2. TURN YOUR LAPTOP ON
 3. PRESS “LAPTOP” BUTTON ON CONTROL PANEL
 4. **WAIT** 30 SECONDS FOR DISPLAY INPUT TO SWITCH
 5. VERIFY THAT LAPTOP IS SET TO VIEW ON ALTERNATE SCREEN (SETTINGS VARY)
 - **FOR DVD:**
 1. OPEN DVD DRIVE AND INSERT DVD
 2. PRESS “DVD” BUTTON ON CONTROL PANEL
 3. **WAIT** 30 SECONDS FOR DISPLAY INPUT TO SWITCH
 4. USE PLAY, PAUSE, STOP, FAST-FORWARD, REWIND, & MENU BUTTONS PLUS DIRECTIONAL KEYPAD FOR DVD CONTROLS
 5. ADJUST VOLUME USING VOLUME KNOB CONTROL
 6. USE “MUTE” TO MUTE AND UNMUTE AUDIO
 - **FOR VHS:**
 1. INSERT VIDEOTAPE INTO VHS DRIVE
 2. PRESS “VHS” BUTTON ON CONTROL PANEL
 3. **WAIT** 30 SECONDS FOR DISPLAY INPUT TO SWITCH
 4. USE PLAY, PAUSE, STOP, FAST-FORWARD, AND REWIND BUTTONS
 5. ADJUST VOLUME USING VOLUME KNOB CONTROL
 6. USE “MUTE” TO MUTE AND UNMUTE AUDIO

3. Power OFF

- When finished, always press **POWER OFF** button

- **WAIT 2 MINUTES** *for projector cool down before attempting to use Control Panel again*